

## **i** PANEL INFORMATION

### FASTENING

**WOOD SUBSTRATE:** USE #8-14 K-LATH SCREWS EXTENDING 1/2" BEYOND THE BACK OF THE SUPPORT MATERIAL.

**STEEL SUBSTRATE:** USE #12-14 SELF-DRILLING SCREWS (SUITABLE FOR SUPPORT THICKNESSES UP TO 1/2"). PRE-DRILL PILOT HOLES WHEN ATTACHING TO STEEL SUPPORTS THICKER THAN 1/8".

**FASTENER SPACING:** INSTALL FASTENERS 24" ON CENTER. ADJUST SPACING PER PANEL LENGTH AND LOCAL WIND-LOAD REQUIREMENTS.


**PANEL LENGTH:** DO NOT EXCEED 20' IN CONTINUOUS LENGTH WITHOUT PROVIDING AN EXPANSION JOINT.

**FASTENER INSTALLATION:** DRIVE SCREWS PERPENDICULAR TO THE PANEL SURFACE.

**PANEL ORIENTATION:** INSTALL PANELS WITH THE LAP LEG POSITIONED AS SHOWN IN THE MANUFACTURER'S DIAGRAM.



## PANEL DATA

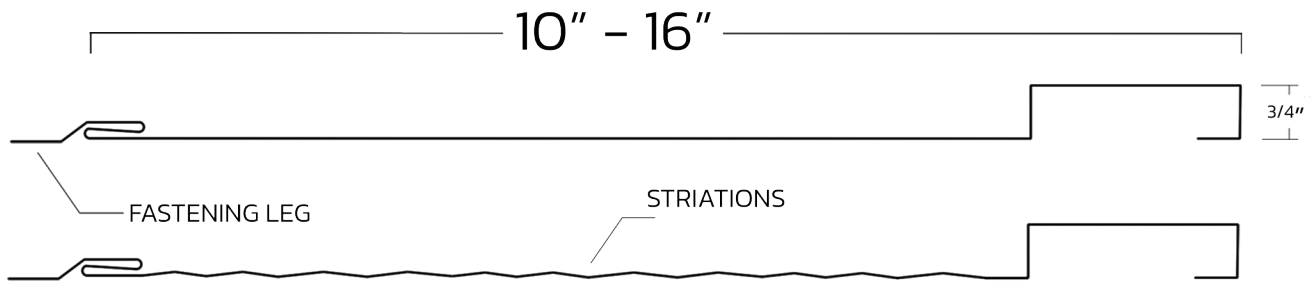

### VERTICAL APPLICATION

